


# SIGNATURE

## Woods

PREMIUM WOODEN BLINDS BY 

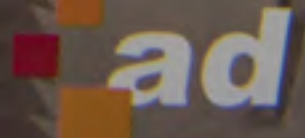

SL NO	INDEX
1	LADDER TAPE OPTIONS
2	ABOUT WOODEN BLINDS
3	OPERATING SYSTEMS
4	50MM RUSTIC WOOD CLASSIC
5	50MM RUSTIC WOOD DISTRESSED
6	35 MM ESSENTIAL WOOD
7	50MM ESSENTIAL WOOD
8	50MM ESSENTIAL WOOD
9	50MM PREMIUM WOOD
10	50MM EXOTIC WOOD
11	50MM EXOTIC WOOD



# Ladder Tape Options

0

To be used with **35mm** and **50mm** Wooden Blinds

LT12

LT13

LT14

LT15

LT16

LT17



To be used with **50mm** Wooden Blinds **only**

LT19

LT20

LT21

LT22

LT23

LT24



To be used with **50mm** Wooden Blinds **only**

LT25

LT26

LT27

LT28

LT29

LT30



Wooden Blinds N-CW-018-50,  
with Tape in LT24

Wooden Blinds N-CW-013-50,  
with Tape in LT30 easy lift operation with cord





left: Wooden Blinds N-CW-025-50, with Tape in LT28 Easy Lift Operation with Cord  
right: Wooden Blinds N-CW-022-50, with Tape in LT26 Easy Lift Operation with Cord



## Wooden Blinds



## Green Initiative



Trending modern and contemporary blinds are inspired by the modern architecture to give the space an immaculate sense of style and comfort. Available in various different options ranging from fabrics, natural materials and modern cellular fibers. They are produced to set the industry standards.

AD products are designed to not only set the bench marks, but also provide durability and comfort while creating an awe-inspiring sense of style

**why wooden blinds?**  
less maintenance **neat**  
classy **elegant** durable  
**natural** contemporary  
less dust **light control**

Signature wood blinds by AD, use UV finish wooden components with SGS test for color fastness and low VOC. Signature wooden blinds retain original color and finish for longer time and avoid color fading and discoloration even after prolonged exposure to direct sunlight resulting in longer product life. AD's product's solvent free finish is achieved by using superior UV hardening varnish which also gives better brightness as well as hard and durable surface. To ensure superior stability thickness of wooden blind slats are 2.9mm for 35mm and 3.0mm for 50mm blinds.

Made out of premium quality of bass wood which is considered to be the best for blind making. It is made using an Advanced "Finger Joint" technology which helps reduce wastage. And thus, helps in conservation of precious natural resources. The Digital printing on wood gives natural effect of wood grain

LOW VOC Volatile Organic Compounds refers to organic chemical compounds having significant vapor pressure which can affect the environment and human health. AD products are environment friendly, have no smell and are safe for humans. Our wooden collection also puts emphasis on **environment conservation**. The wooden slats are made from a latest FINGER JOINT technology, which ensures minimal wastage of wood in production.

**expert tip:**  
*you can combine wood and  
tape colours to complement  
your interior design*



# Operating Systems


## Cord Lock

50mm and 35mm



## Easy Lift with Cord

50mm and 35mm

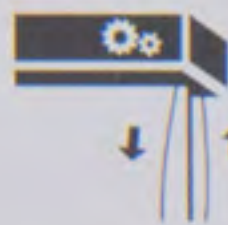


## Easy Lift with Chain

50mm only



## Automation

50mm only

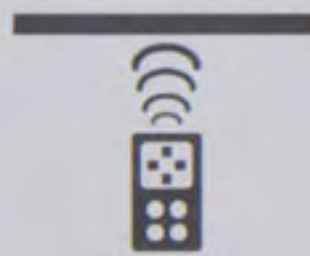


# Additional Features

for 50mm and 35mm  
for all Operating Systems



with Ladder Tape  
(see front of this folder for colour options)

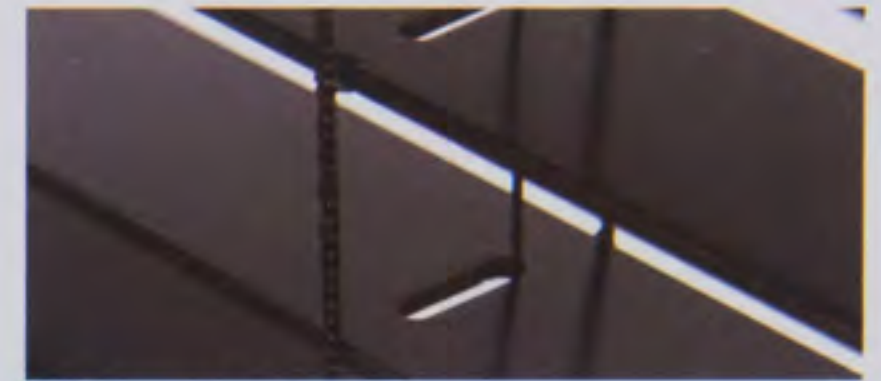

without Ladder Tape

**ad** add class  
and style to  
your rooms

### Operating System

### Additional Features

Minimum W  
(in feet)

Minimum H  
(in feet)

Maximum W  
(in feet)

Maximum H  
(in feet)

Max. SqFt  
(in feet)

with/without  
Ladder Tape

35mm wooden - Cord Lock

Both

1

1.5

8

12

40

35mm wooden - Easy Lift with Cord

Both

1.5

2

8

14

65

50mm wooden - Cord Lock

Both

1.5

1.5

8

12

40

50mm wooden - Easy Lift with Cord

Both

1.5

2

8

14

65

50mm wooden - Easy Lift with Chain

Both

1.5

2

8

12

70

50mm wooden - Automation (motorized)

Both

2.5

3

8

12

90





White Sand | R-CW-011



Warm Walnut | R-CW-014



Natural Oak | R-CW-012



Rich Wenge | R-CW-015



Golden Oak | R-CW-013






Distressed Sand | R-DW-016



Distressed Slate | R-DW-017

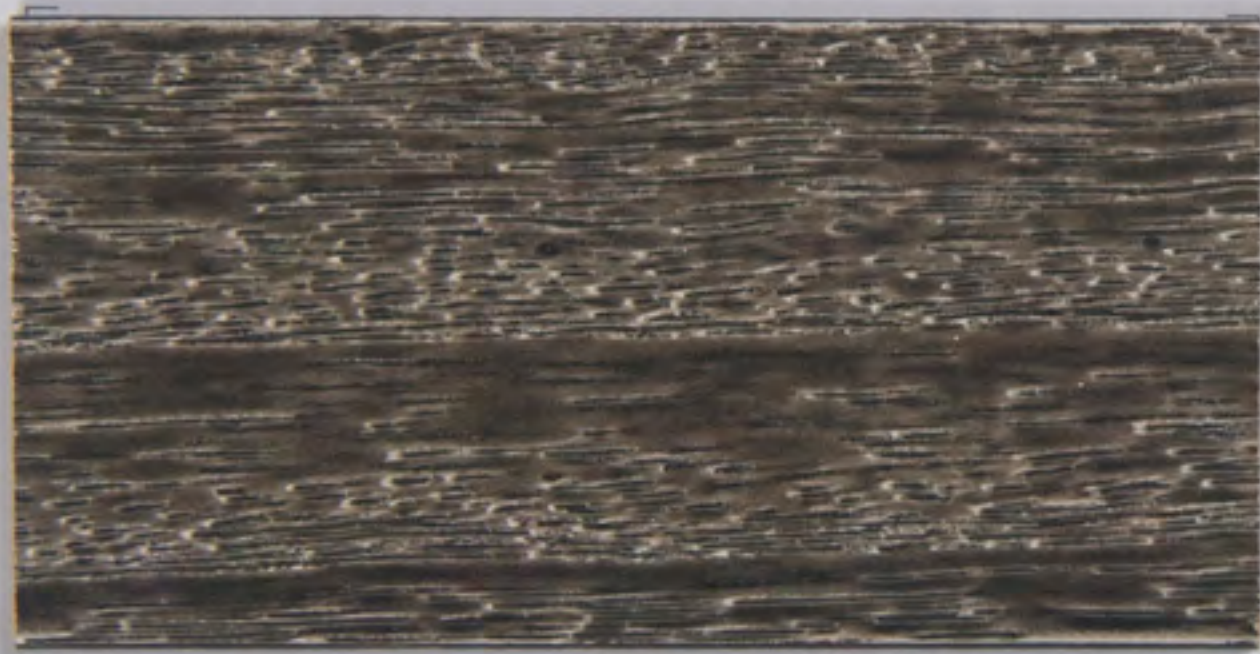


Distressed Ash | R-DW-018





Sunkissed Oak | N-CW-013-35

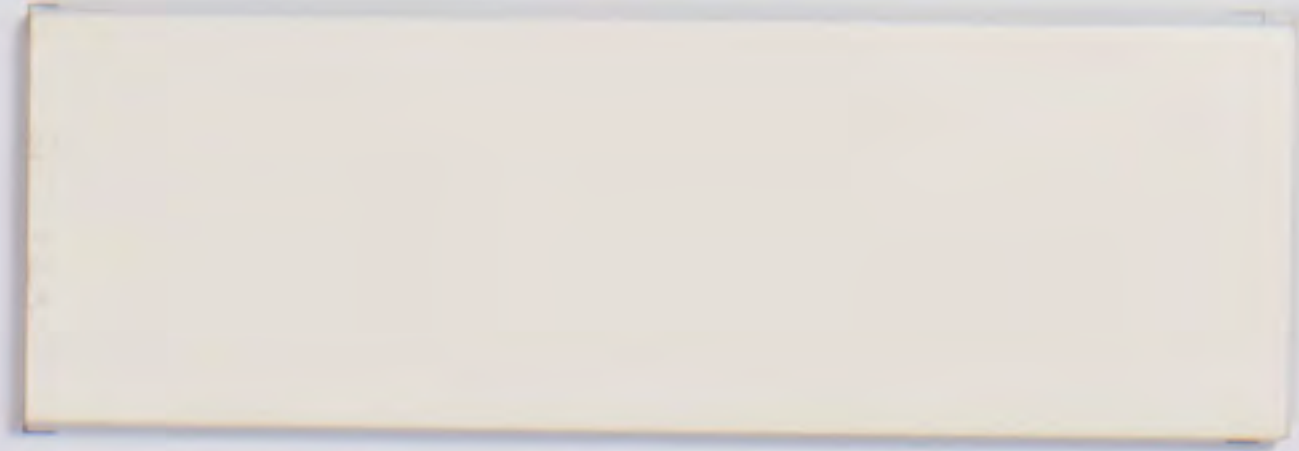

Cloud | N-CW-018-35



English Walnut | N-CW-014-35



Old Mahogany | N-CW-019-35



Warm Chestnut | N-CW-015-35



Bourbon | N-CW-020-35



Warm Cherry | N-CW-017-35



Walnut | N-CW-021-35





Sunkissed Oak | N-CW-013-50



Cloud | N-CW-018-50



English Walnut | N-CW-014-50



Old Mahogany | N-CW-019-50



Warm Chestnut | N-CW-015-50



Bourbon | N-CW-020-50



Warm Cherry | N-CW-017-50



Walnut | N-CW-021-50





Tiger Eye | N-CW-022-50



Smoke Grey | N-CW - 024-50



American Walnut | N-CW-023-50




Light Blue | N-CW-025-50





Distress Grey

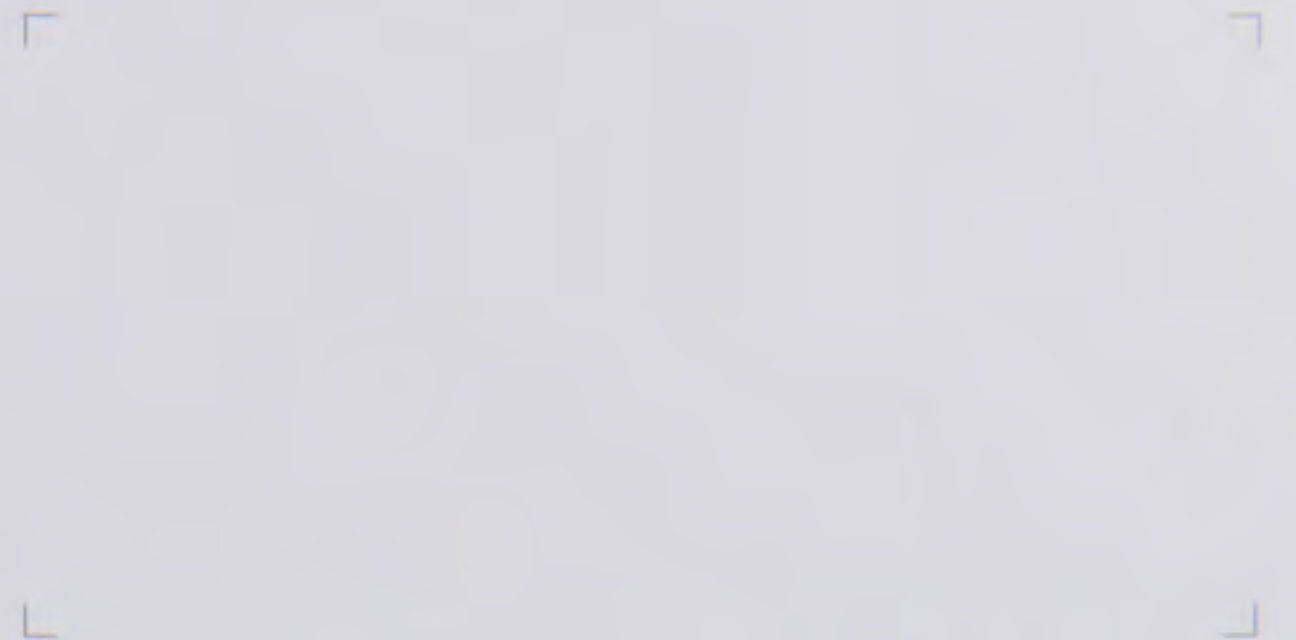

Distress Light Brown



Distress Warm Cherry



Distress Amber Ale



Distress Oak



Distress Cherry



Distress Dark Oak





Two Tone Natural



Two Tone White Pine



Two Tone Blue Oak



Two Tone Ashwood



Two Tone Mahogany





Two Tone Ebony



Two Tone Blue Walnut



Two Tone Dark Walnut



Two Tone Special Walnut



Two Tone Redwood